

OPERATING INSTRUCTIONS


Arwinger CassetteSeparationToiletKit Cassette

Thank you for choosing the Arwinger CassetteSeparationToiletKit! We wish you a successful conversion and lots of fun with your new cassette separation toilet.

If you have any questions, please do not hesitate to contact our customer service: service@arwinger.de.

Delivery contents:

- (A) Liquid tank
 - (A1) Recessed handle
 - (A2) Hose connection with plug
 - (A3) Spout with cap
 - (A4) Level indicator
- (B) Solids container
 - (B1) Tensioning strap

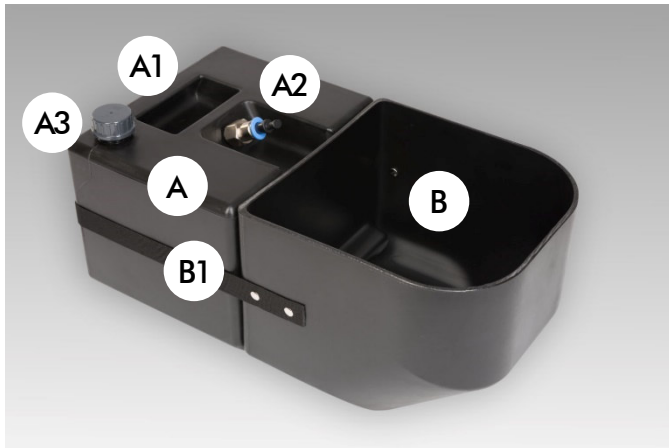

Preparation



1. Place a bag in the open top solids container of the cassette and pull it at least 5 cm over the rim. We recommend using a bag made of recycled material.
2. Add some litter to the bag to bind the moisture more quickly, e.g. small animal litter, sawdust, coconut fibres, bark mulch or special separating toilet litter.

Connection

3. Push the cassette as far as possible into the service compartment with the solids container first. Check that the solids container is optimally positioned below the solids outlet of the seat part by looking inside the toilet.



4. Pull the plug out of the hose connection in the middle of the top of the liquid tank by pushing down the blue ring on the top edge of the hose connection. Keep the plug as it is needed to close the hose connection for transport of the liquid tank.





5. Push the loose end of the urine hose attached to the fluid outlet of the seat part firmly into the hose connection of the fluid tank. To make this easier, you can put the toilet in the position in which you use it. Then the hose has the maximum length and can be inserted more comfortably. Make sure that the hose is routed without kinks and with a downward slope.

Usage

6. When using the CassetteSeparationToilet, make sure that urine only flows into the front funnel area of the seat part with separation function. For women, depending on their anatomy, it may be necessary to position themselves slightly further forward on the seat section than is usual with a conventional toilet.
7. The urine runs into the liquid tank of the cassette via the hose attached to the seat part. Do not add water to the liquid funnel to flush. This would go against the principle of the separation toilet and lead to odour development.
8. Faeces fall through the solids outlet of the seat part into the bagged solids container of the cassette.
9. To better bind moisture and residual odours, we recommend adding some litter to the faeces. When doing so, make sure that no particles get into the liquid funnel. This could lead to a blockage of the drain.



10. The level of the liquid tank can be read in the sight glass on the front of the tank.

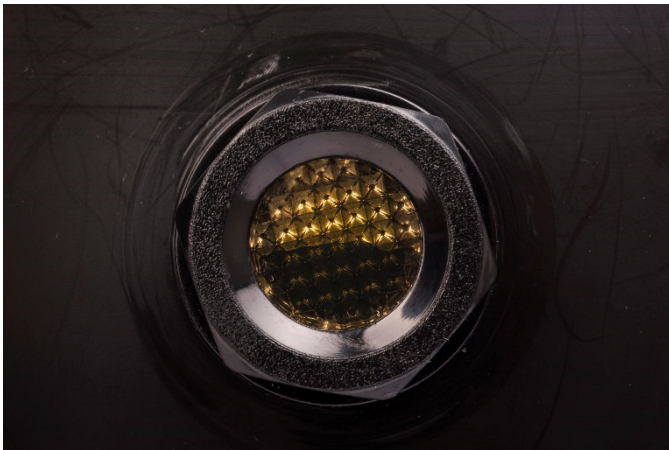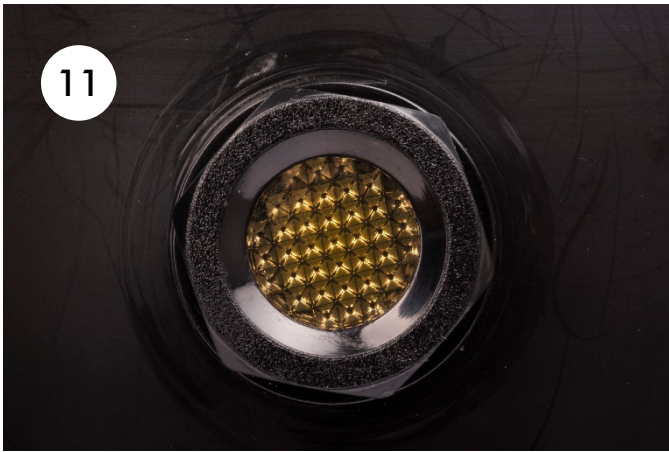

11. If the glass is half darkened, there is still a capacity of approx. 1.3 litres. If it is completely darkened, the tank must be emptied.

Emptying



12. Pull the hose out of the hose connection by pressing down the blue ring on the upper edge of the hose connection.



13. Close the hose connection for transporting the liquid tank by pressing in the plug firmly.

14. If you want to empty both parts of the cassette, pull the entire cassette out of the service compartment.



15. Loosen the tensioning strap by pressing down on the buckle and pulling the tensioning strap out of the buckle.



16. You can now pull off the liquid tank, which is anchored with a bar in the solids container.

17. If you only want to empty the liquid tank, you can loosen the tensioning strap directly in the service compartment and then pull out only the tank.



18. When transporting the liquid tank, make sure that you do not turn it upside down, as drops could then spill out of the cap of the spout. The cap is equipped with a vent to ensure pressure equalisation during use of the cassette.



19. Before emptying, pull the plug out of the hose connection of the liquid tank again to allow for pressure equalisation.



20. Open the cap and empty the urine through the spout.

21. The liquid tank can be rinsed out with diluted vinegar essence or similar from time to time after emptying through the spout, as desired.

22. Empty the solids container by removing the bag and its contents.

23. After emptying, place if necessary, a new bag in the solids container and sprinkle in some litter, push the liquid tank back into the solids container and fasten the tension strap. Then insert the complete cassette into the service compartment and reconnect the urine hose.

Arwinger GmbH & Co. KG, as a manufacturer of products, is a so-called downstream user within the meaning of the REACH Regulation 1907/2006/EC. Obligations due to the production and placing on the market of substances/chemicals for pre-registration or registration (ECHA) are not applicable for us. In order to guarantee our customers a continuous supply of reliable and safe products, we ensure through appropriate queries that our suppliers fulfil all requirements with regard to chemical substances and materials in the sense of the REACH Regulation 1907/2006/EC.

March 2023